



Zebra® Printer Setup Tutorial


There are two parts to setting up Zebra® printers with DeliLabel™. The first is done using the Zebra® Printer Setup Utility app and the second is done using the DeliLabel™ app.

Important: This setup is for Zebra® models purchased through DeliLabel™. Other Zebra® models or the same models purchased elsewhere may not function correctly with DeliLabel™.


1. Download the Zebra® Printer Setup Utility app from the iOS app store.




2. Load the printer with labels and power it on.
3. Launch the Zebra® app and tap Discover Printers. The app should find your printer via a Bluetooth connection.

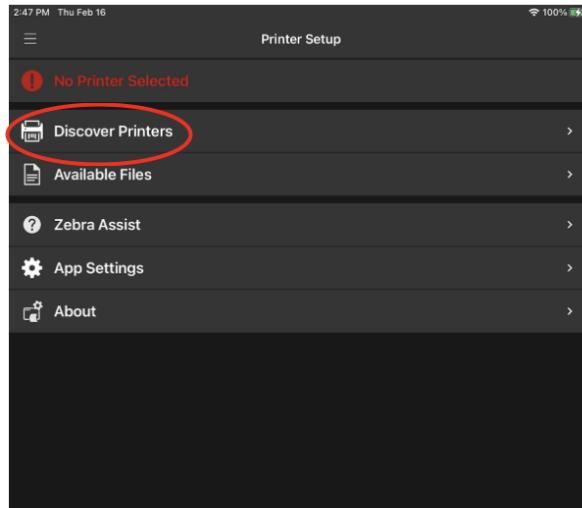

 
4. Find your printer in the Discovered Printers list and select it. If this is the first time connecting to this printer, it will be identified by its serial number.

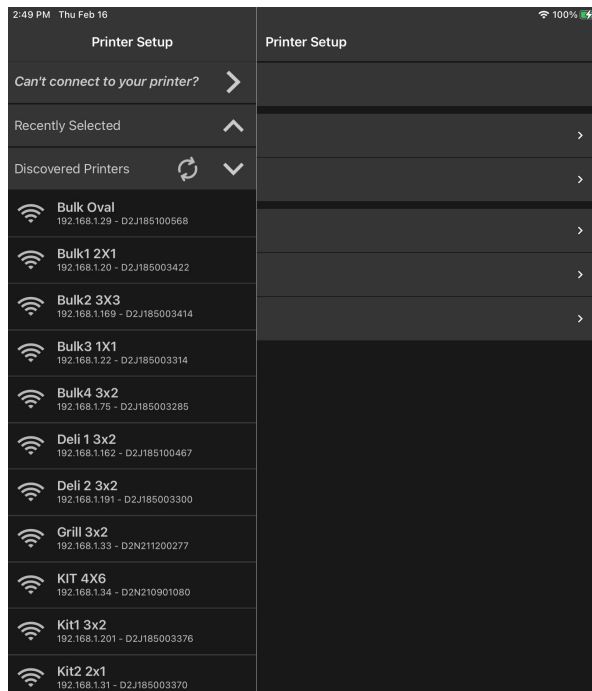


5. Tap Connectivity Settings.

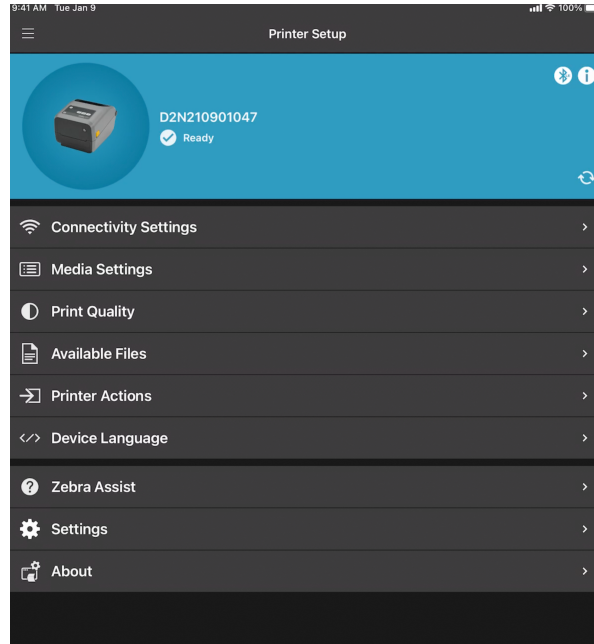


6. **For Bluetooth Printer Connection (WiFi go to step 7):** Bluetooth can only support a single printer. If you have multiple printers to connect, you must use WiFi.
 - a. Tap Bluetooth.

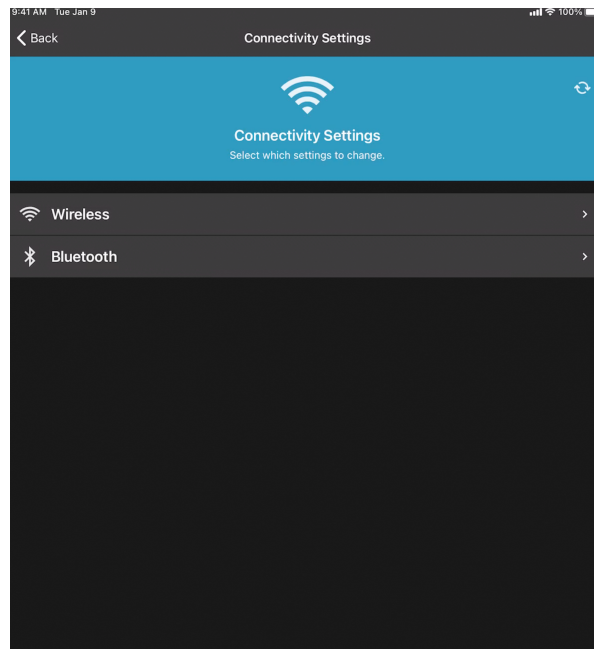

- b. Toggle both the **Bluetooth** and **Discoverable** toggles ON. Enter a Printer Name if you wish to or leave the default name. Tap Next.

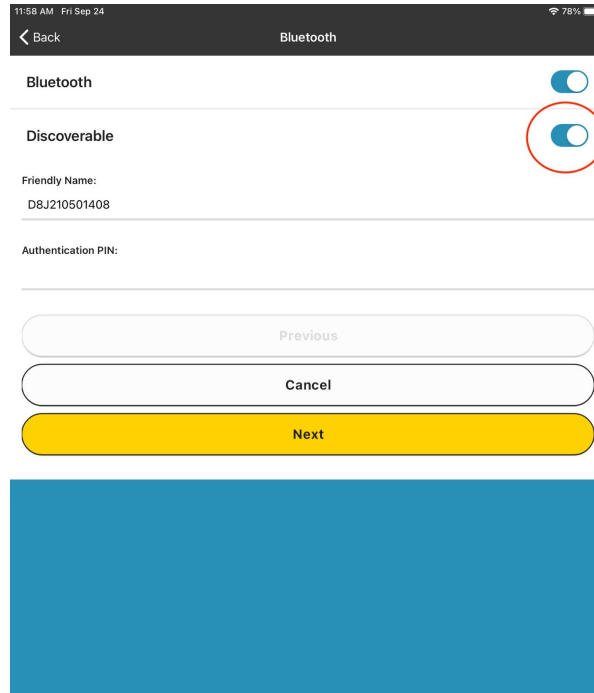


 - c. Tap Next and then Apply on the following screen.

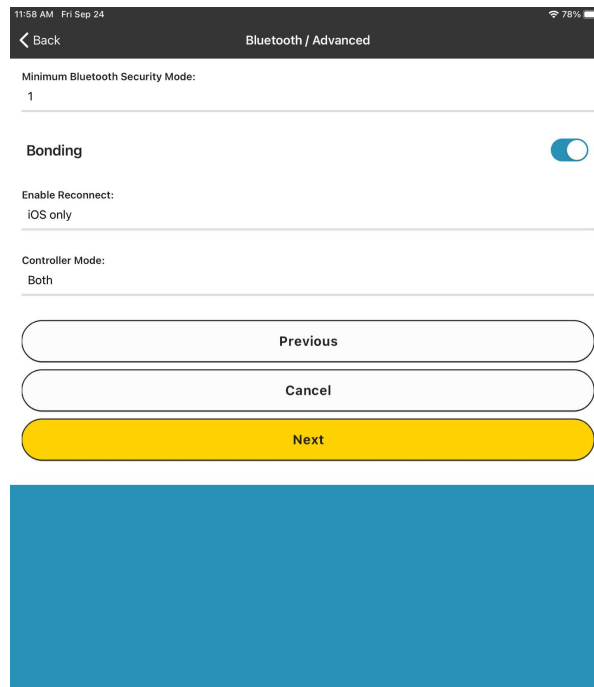


7. **WiFi Printer Connection:** WiFi connections are required when you would like to connect multiple printers with different label sizes. DeliLabel™ will automatically print from the correct printer based on the label size you selected.

a. Tap Wireless.

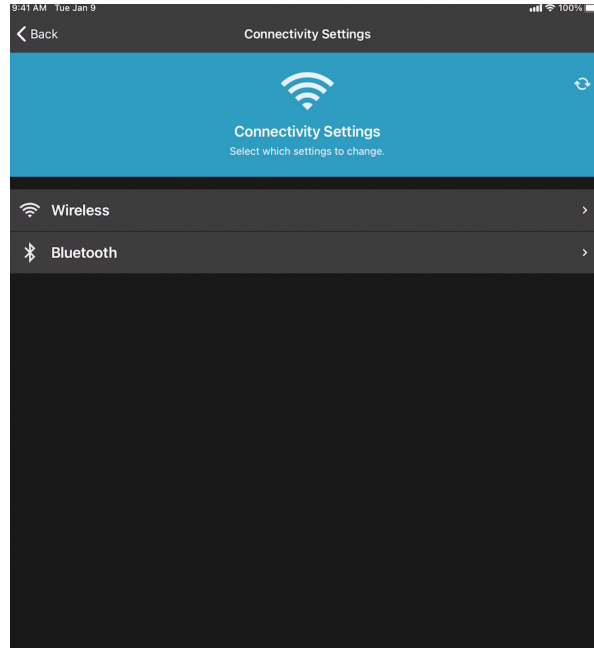

b. Give your printer a name in the Hostname field. This should be descriptive enough that you can identify the printer in the Deli Label app. It can be helpful to include the label size that the printer will be loaded with and possibly the location, ie Kitchen 3 x 2. Tap Next.

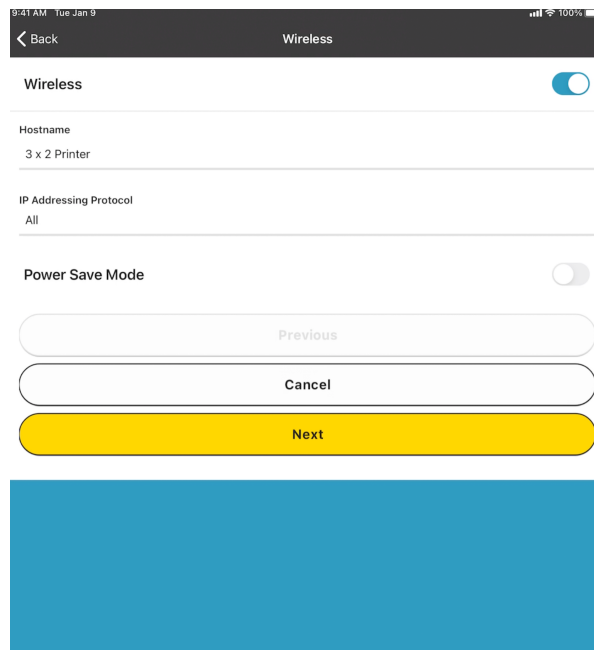

c. No changes on this screen. Tap Next.

9:41 AM Tue Jan 9

< Back Wireless / Client ID

Client ID

Type
MAC Address

Prefix

Suffix
48a4938087ac

Previous

Cancel

Next

- d. Enter your Wifi Network ID in the ESSID field. This must be spelled exactly the same as your Network name.
- Select the Security Mode for your network from the dropdown. This will be specific to your network although WPA_PSK is very common.
 - Tap Next.

9:41 AM Tue Jan 9

< Back Wireless / Details

ESSID
Demo

Security Mode
WPA PSK

Wireless Band
All


Channel List

Previous


Cancel

Next

- e. If you chose WPA_PSK as your security mode, enter your network password in the Wireless Identity field. Tap Next.

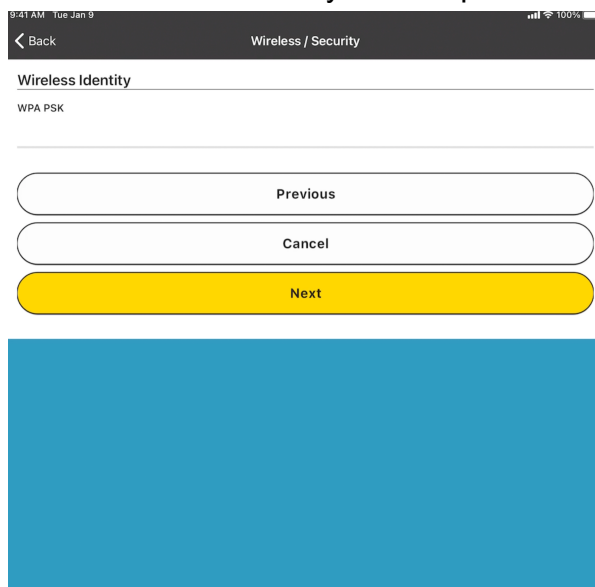


- f. Tap Apply to save the settings to the printer.

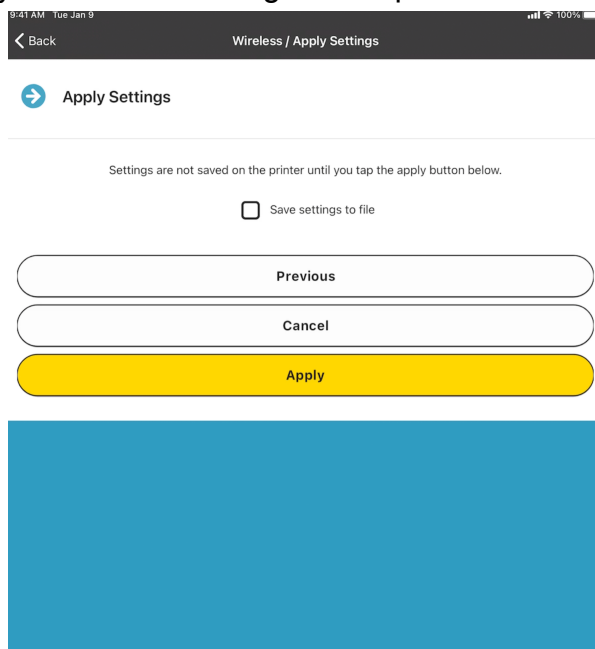


8. Tap Reset and give the printer a few minutes to reboot. After the printer restarts, the network light on the printer should turn green indicating that the printer is

connected to the network. If it doesn't, double check your network settings and try connecting again.

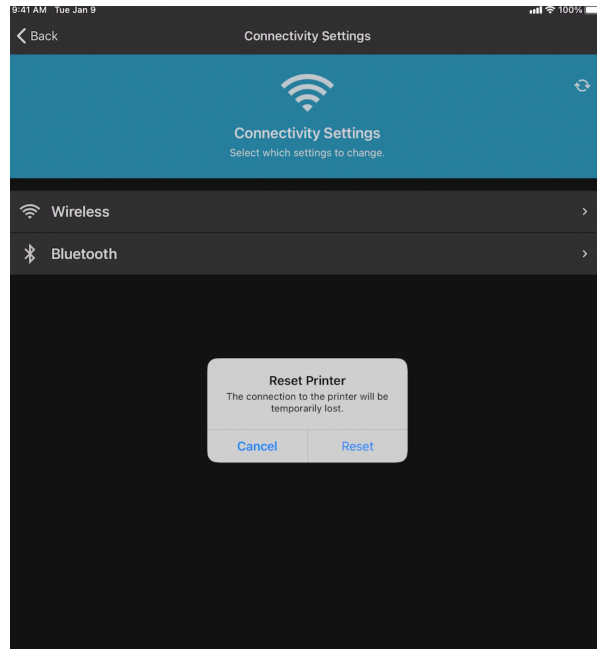


9. If you see the No Printer Selected message, tap the menu button in the upper left corner and select your printer from the Discovered Printers section to connect.

 
10. Tap Media Settings to configure the Label Parameters.

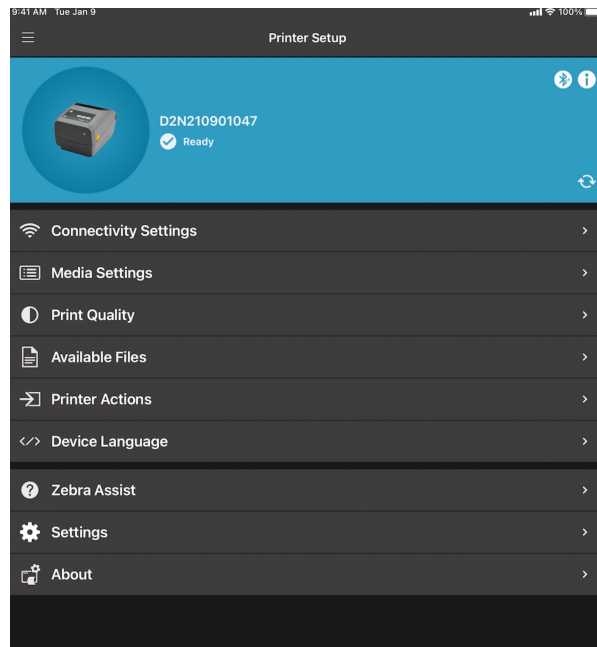


11. Tap Media Settings to edit the media settings.

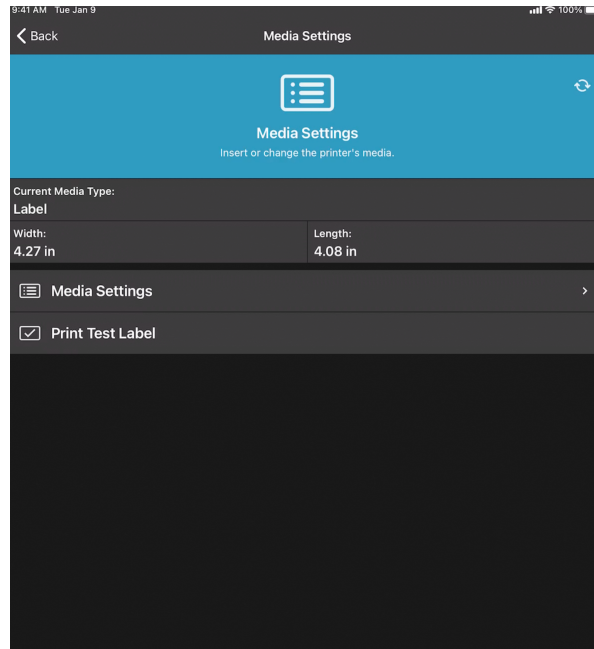

 
12. Set the media type to Label/ Tag. Tap the Width and Length field to enter the label dimensions. The Orientation should be set to Normal. Tap Next.

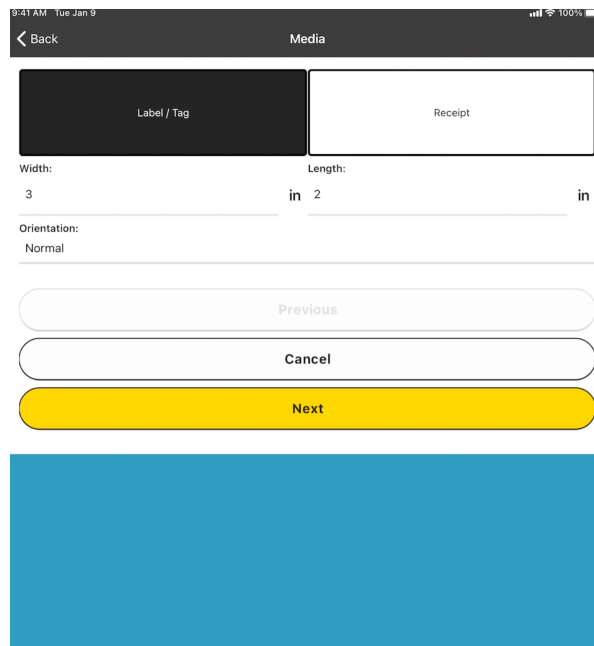


13. Media Type should be Auto Detect. Type of Transfer is Direct Thermal. Media Handling is Tear Off unless a Peeler/ Dispenser is being used with the printer. If so, set Media Handling to Peel Off. Tap Next.

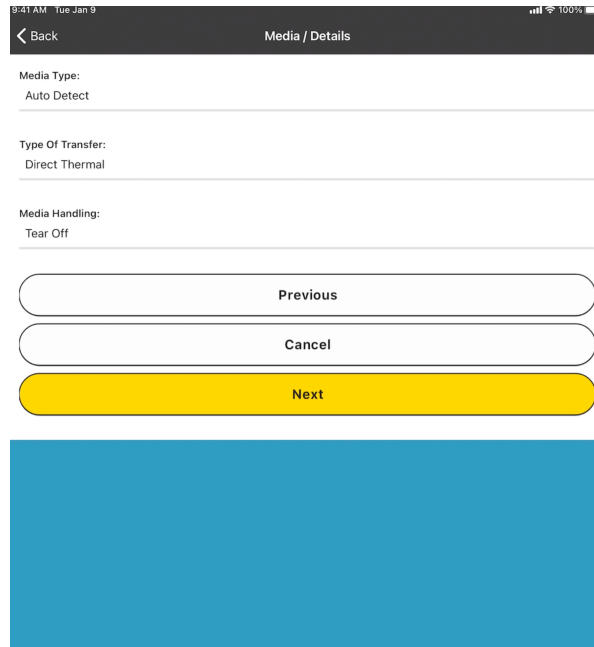

 
14. Tap Apply to save the settings to the printer.

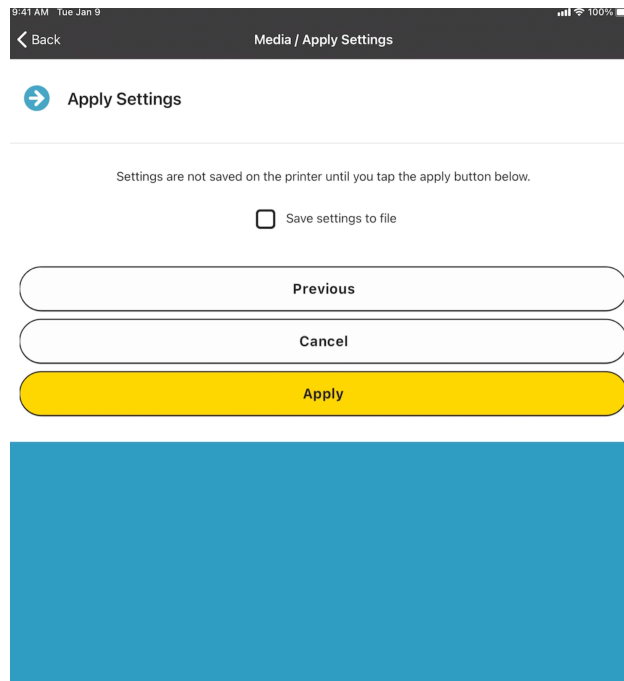


15. Tap Print Quality to adjust the print settings.

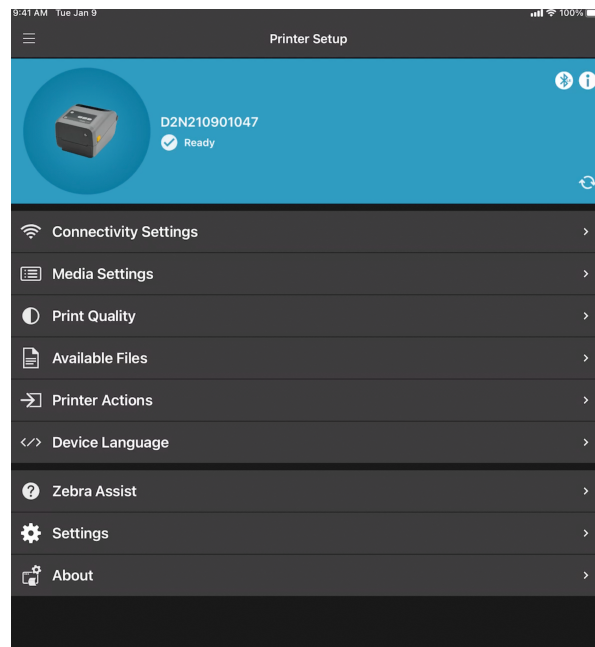

16. Tap Manually Adjust.

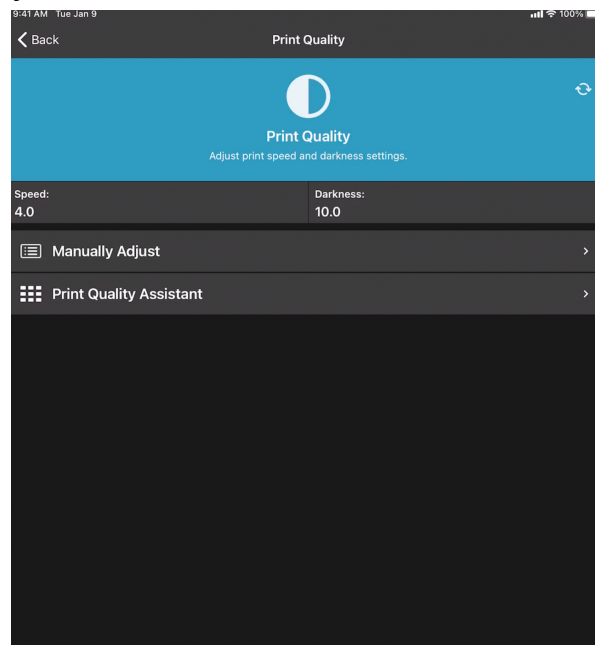


17. Set the Speed to 4.0 and the Darkness to 30.0. Tap Next and then Apply to save the settings to the printer. You have successfully configured the ZD420 printer in the Zebra® Setup Utility app.

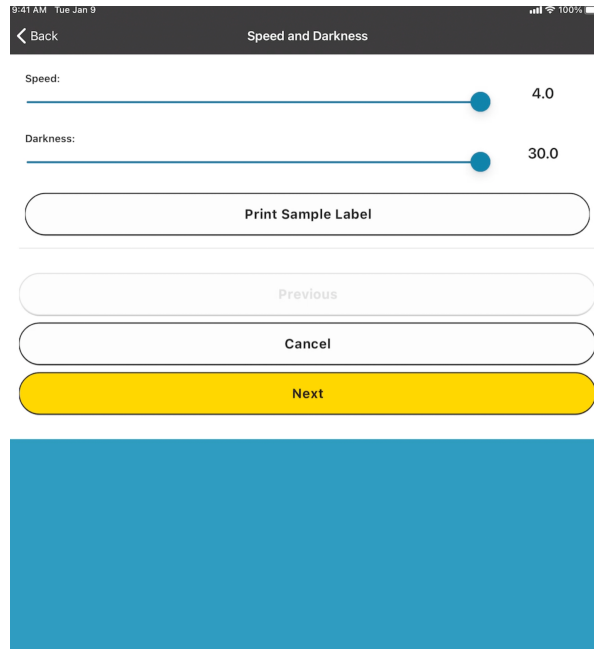

The next part of the setup will take place in the DeliLabel™ app.


Important: To Log into the DeliLabel™ app, you will first need to create an App User in the Admin Dashboard. The credentials you used to sign up for DeliLabel™ will not work for logging into the App unless an App User has been created for them. For assistance with this, please visit our [DeliLabel™ Admin Dashboard](#) support page.


1. Download and install the [Deli Label™ app from the iOS App Store](#). Enter your User Email and Password that was sent to you when you created an App User in the Admin Dashboard.

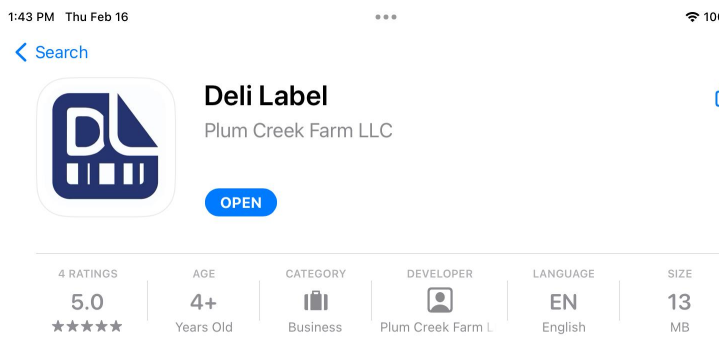




2. Tap the Menu icon on the bottom left corner of the screen, then tap Settings, and then tap printer stations.

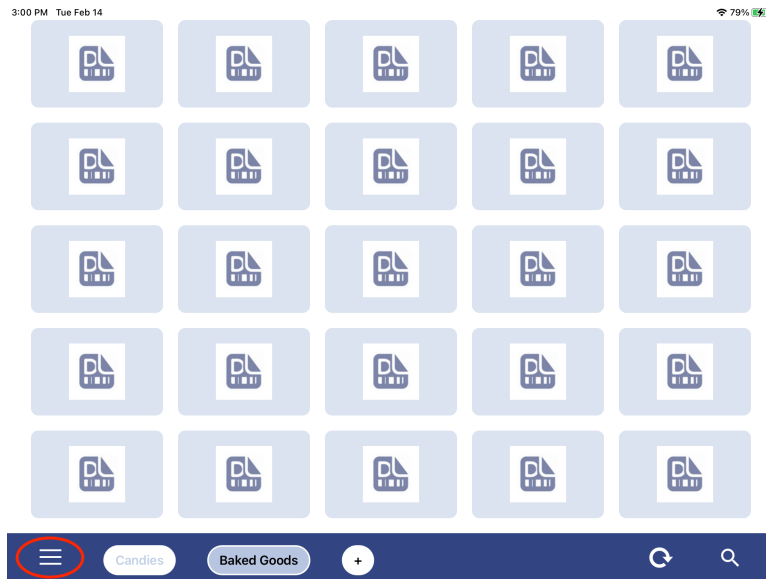


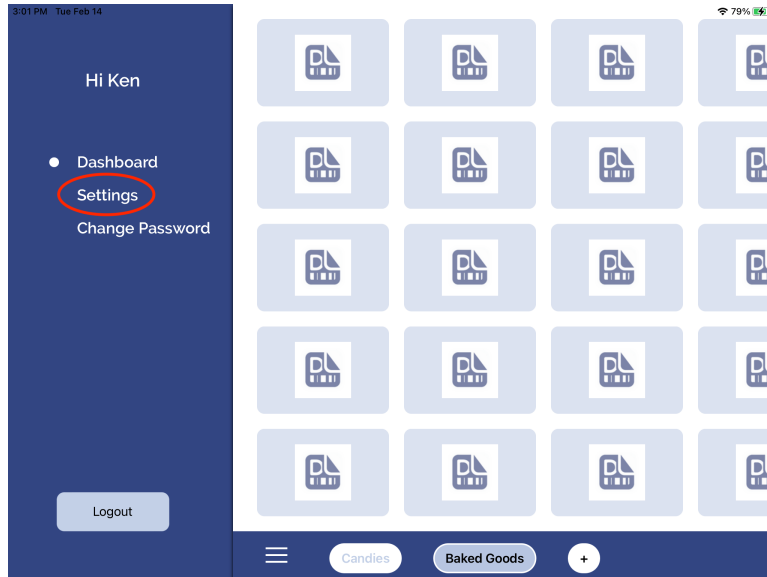


3:03 PM Tue Feb 14 80%

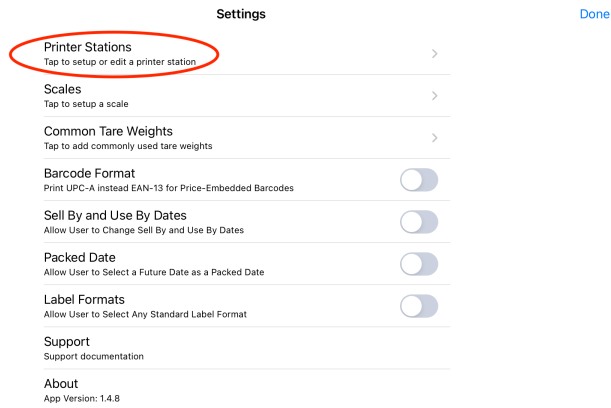 

 3. If this is your initial setup, you will have no printers saved. Tap Create Printer Station.

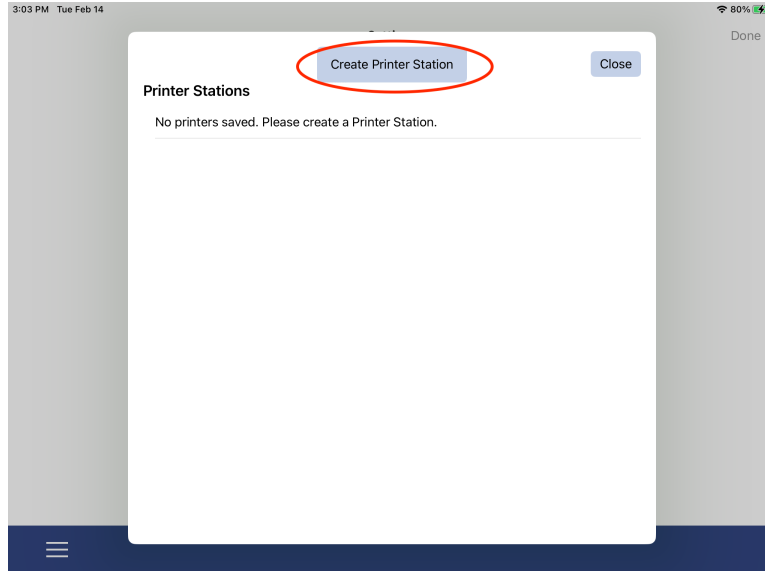


 4. **Select a Printer connection:** You should select either Zebra Wifi or Zebra Bluetooth depending on which type of connection you established in the Zebra® Setup Utility App above.
 - a. Before continuing, you must open your device's Bluetooth settings and forget the device, then reconnect to it. This disconnects the printer from the Zebra app and allows DeliLabel to find it.
 - b. Return to DeliLabel™ and tap Zebra Bluetooth.

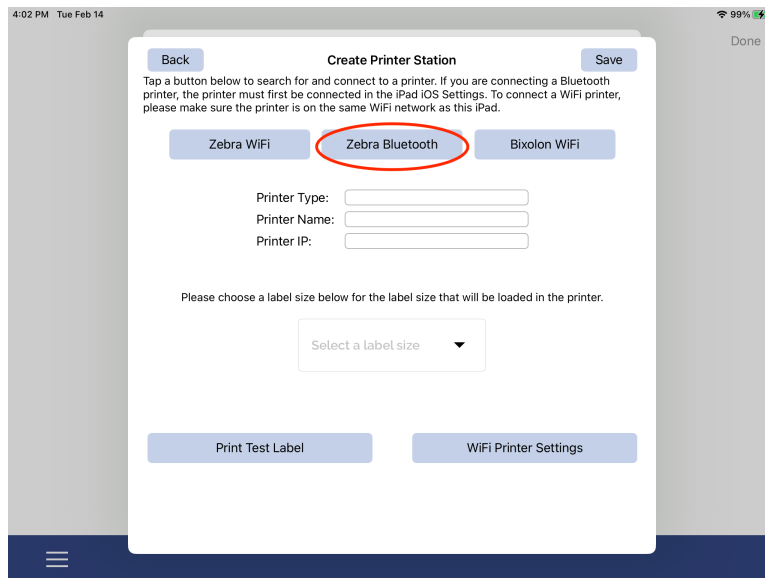


- c. If this is your first time setting up a printer, you will get a pop up like the one below. Select OK. If you select Don't Allow, you will need to go into

 
the iPad's settings and allow DeliLabel™ to access Bluetooth before continuing.

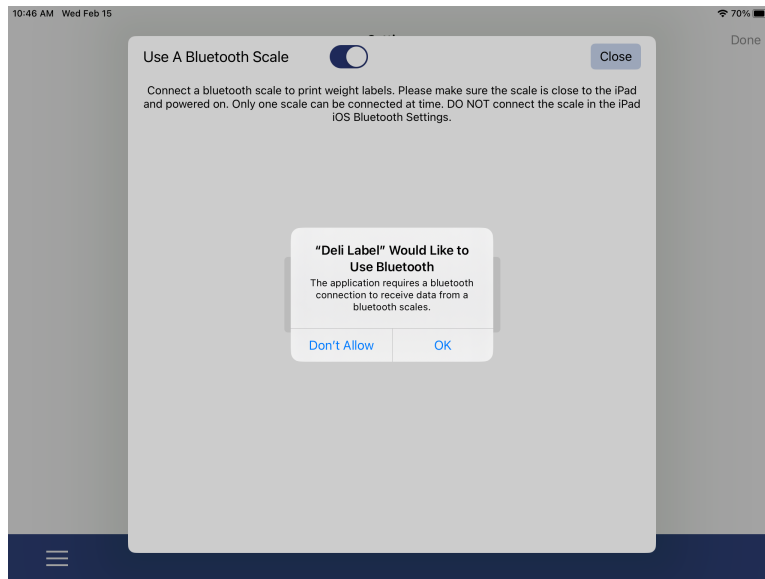


- d. Select your printer from the list. If your printer does not appear in the list, forget the printer in the iPad's settings and reconnect. Then return to DeliLabel™ and try again.

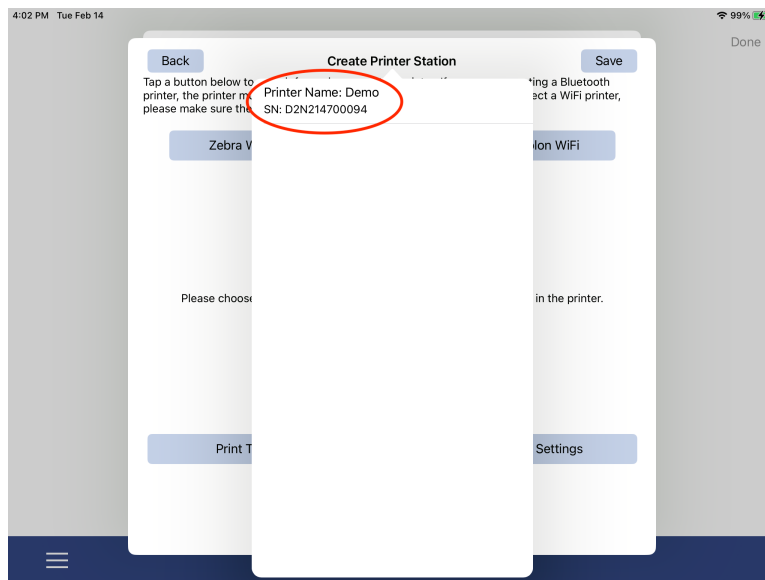

 
- e. After selecting your printer, the type, name, and IP fields will now be filled in. Select the appropriate label size and print a test label if you'd like. Be sure that you click **save** in the upper right corner.

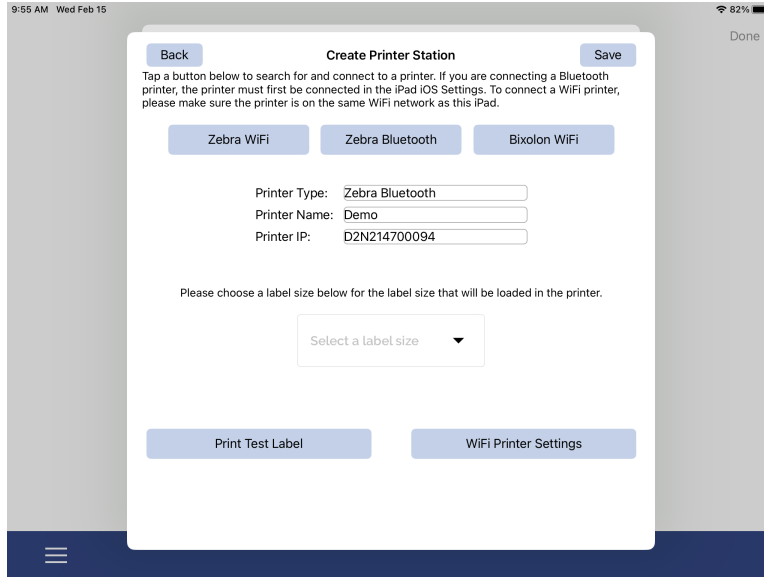


- f. You should now see your Bluetooth connected printer in the list of printers. You can close the printer setup window.

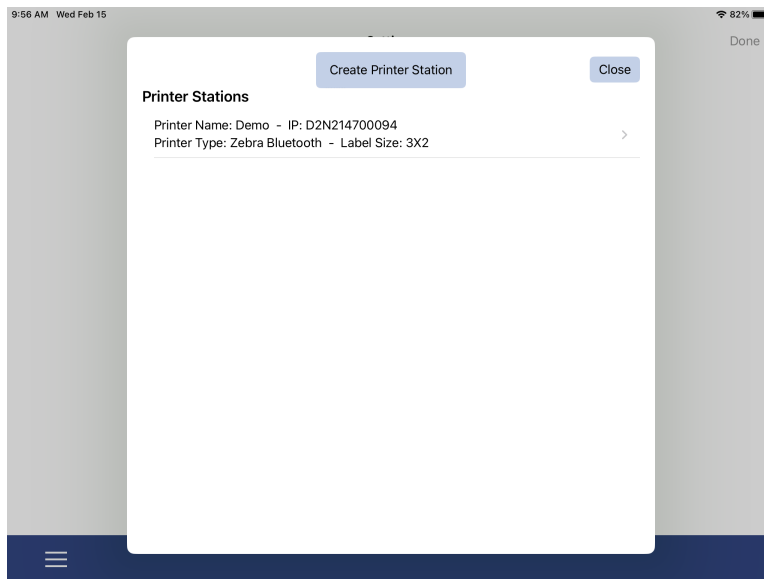

 
5. **Zebra® WiFi Printer Connection:** To connect to a Zebra® printer through wifi, the printer must first be connected to your local Wifi Network. This was covered in step 7 of the Zebra® setup above.
 - a. Tap Zebra Wifi.

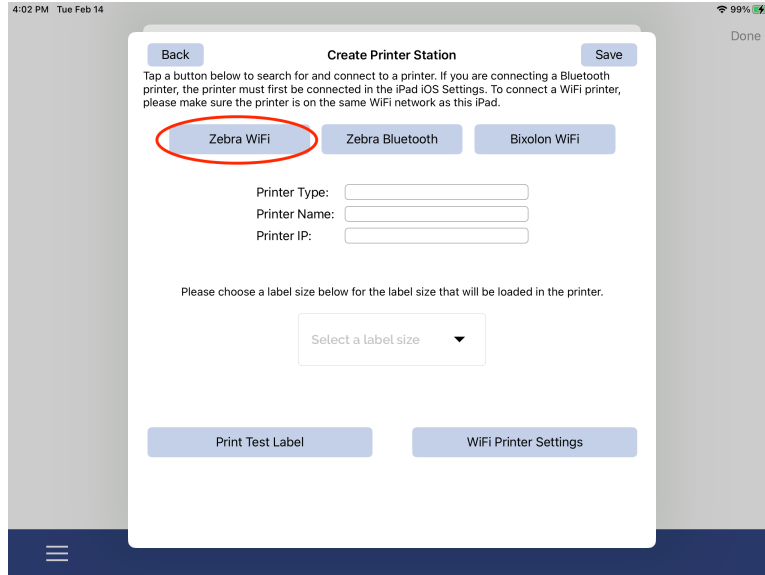


- b. If this is your initial setup, you will see a popup like the one below. Tap “Allow” to enable DeliLabel™ to connect to devices on your network. If you tap “Don’t Allow”, you will need to go into your iPad’s settings and give DeliLabel™ this permission before continuing.

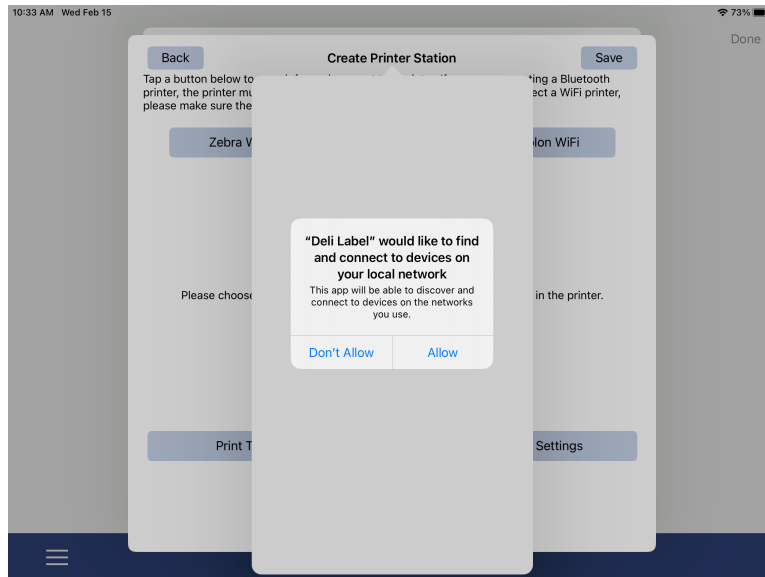

- c. If your printer doesn’t appear on the list, tap to the left or right of the search window, then tap Zebra Wifi to search again. It may take more than one search to find a printer. Your printer will have the name you gave it in the Zebra® Printer Setup Utility app (serial number is the default).

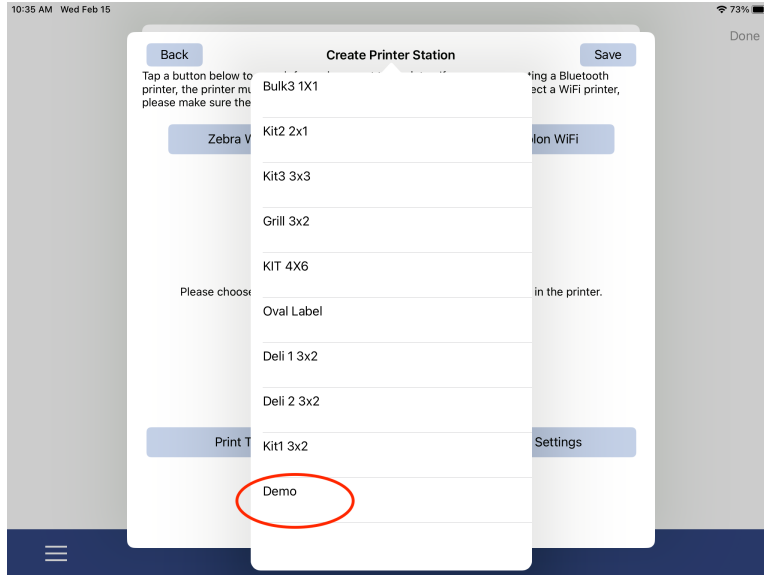

- d. The printer information will autofill the type, name, and IP fields. Select the label size that matches what is in your printer. You can print a test label and then be sure to tap **save** in the upper right corner.

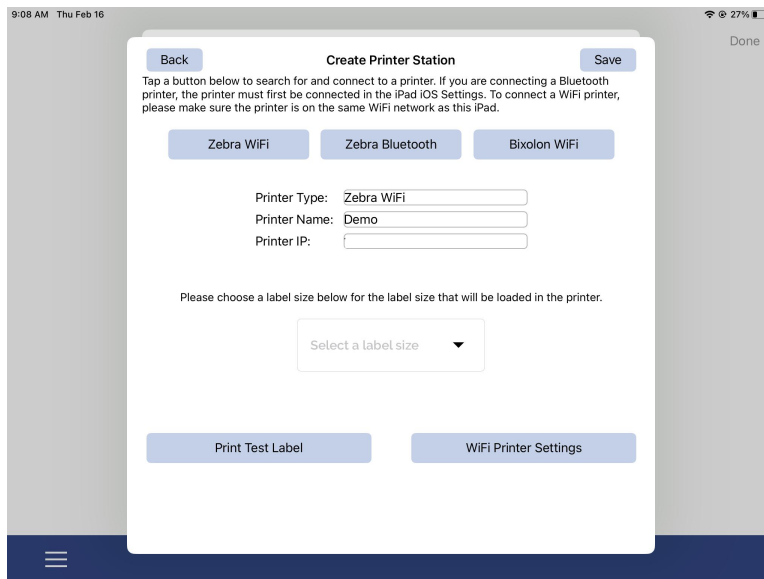

- e. Your printer will now be visible in the list of connected printers. You can close the Printer Station window.

6. If this is your initial setup, the next step is to connect a scale. You can find our tutorial for connecting a scale [here](#).