






Torrey® Bluetooth Scale Setup

Make sure your scale is powered on and near the iPad. **DO NOT** connect to the scale in the iPad's Bluetooth settings.


1. From the settings menu, tap Scales.

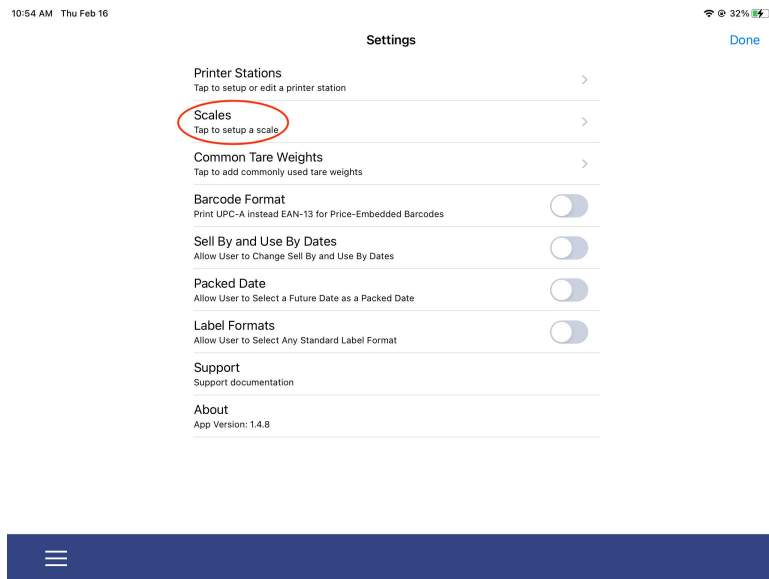

2. Toggle the Use A Bluetooth scale option at the top to on. If this is your initial setup, you may see a popup like the one below. Tap OK to allow Delilabel™ to use Bluetooth. If you tap Don't Allow, you will need to go into your iPad's settings and give Delilabel™ Bluetooth permissions before continuing.

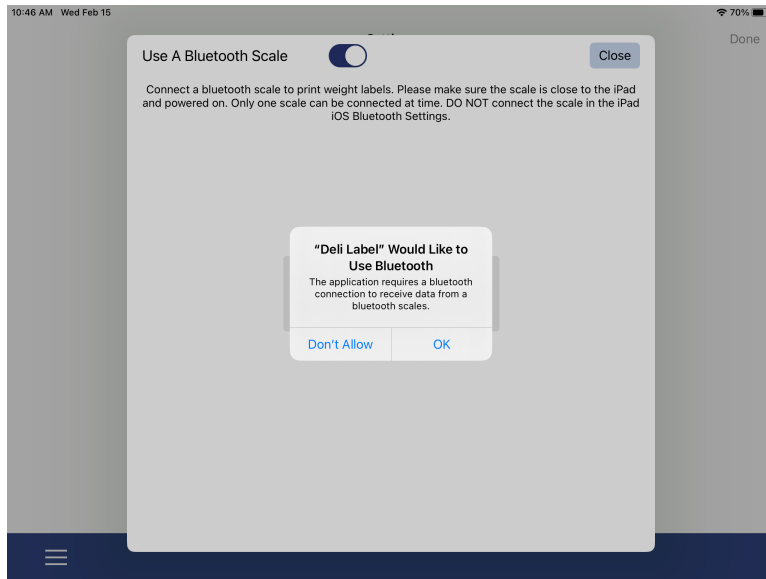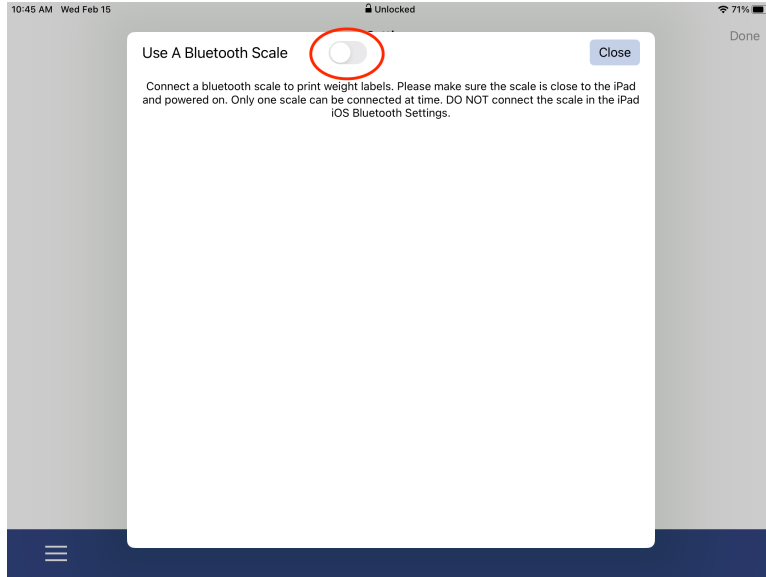

- a. Tap connect on the scale that matches the six digit number on the bottom of your scale.

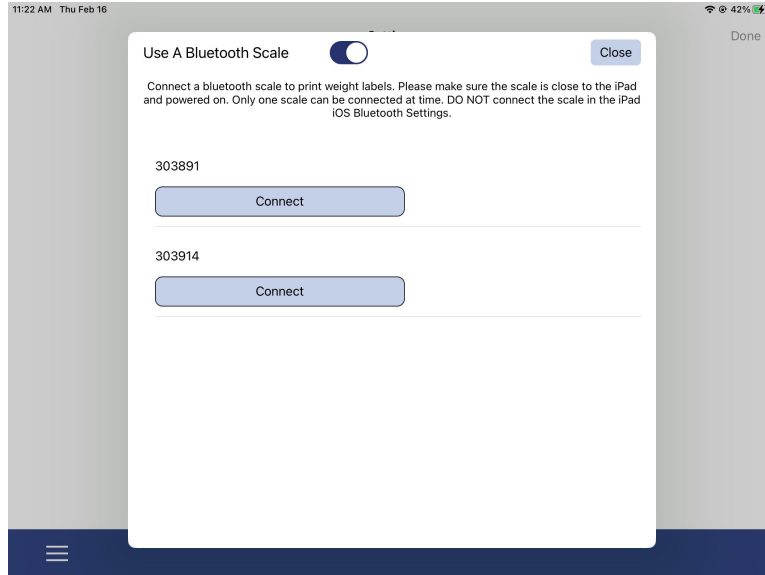

- b. The button below your scale will now read Disconnect, indicating that your scale is connected. You can close the setup window.
3. If this is your initial setup and you have already configured your printer, please proceed to our [DeliLabel™ app setup and label printing tutorial](#).

REV 03.2023